


Winterizing a T@B


2016 Models with Alde Heaters

Valves are in camping season mode

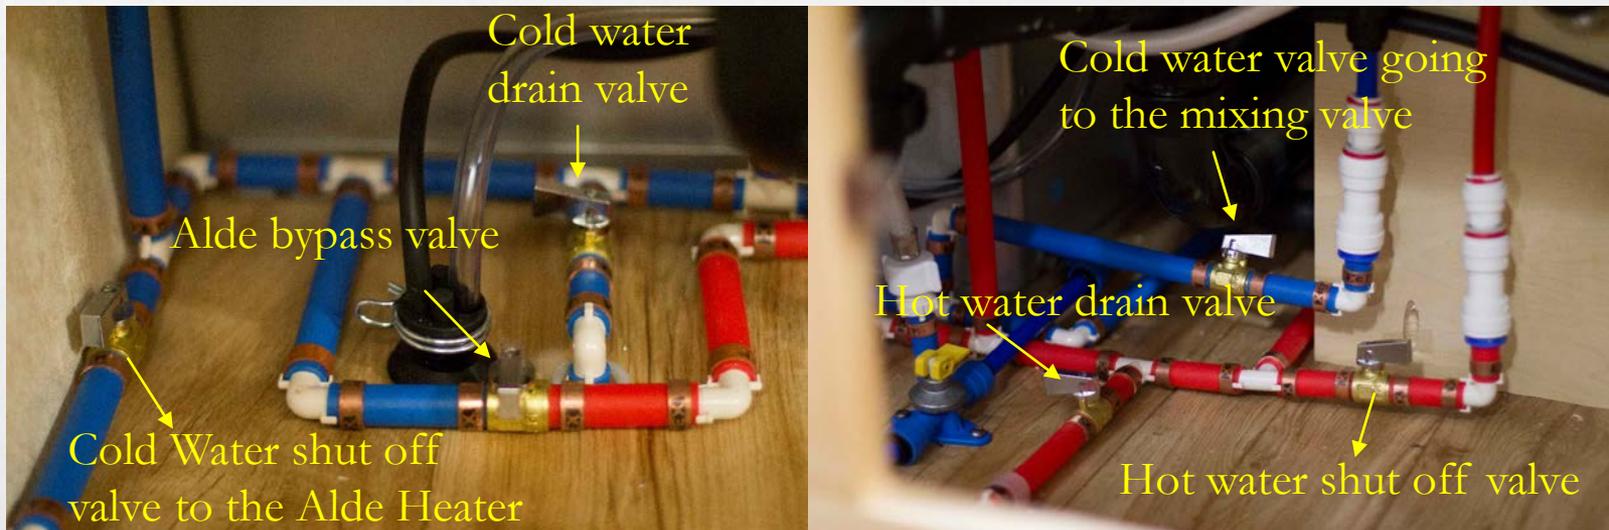

Valves are in winterizing mode after water was drained from the lines.

(only needed if you're using RV antifreeze to winterize)

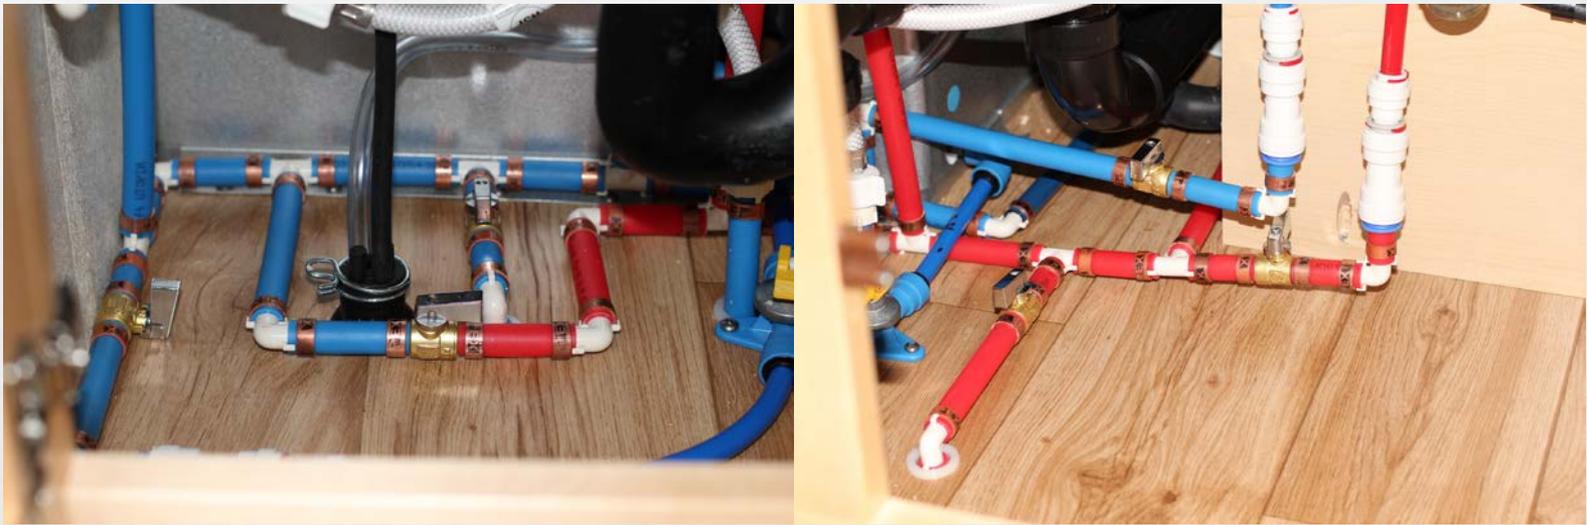



Located in front of the Passenger side wheel.




Fresh water tank fill port.


City Water Fill



Hot Water Mixing valve.
(don't need to use to winterize)

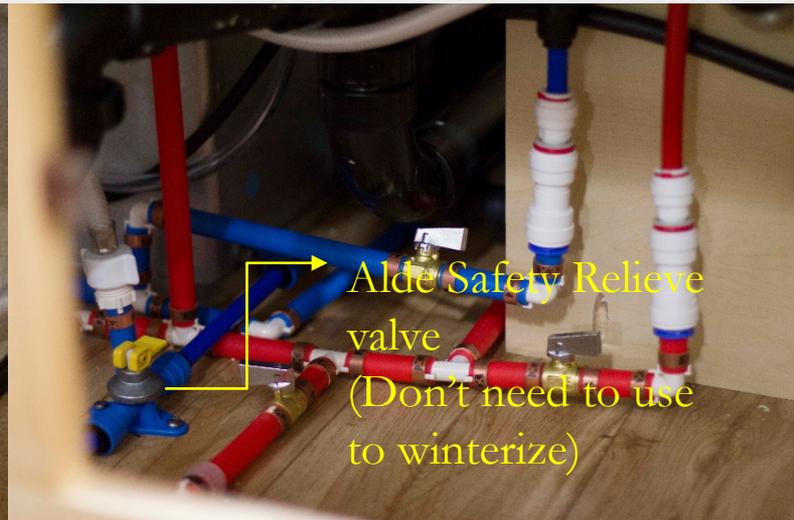

Alde Safety Relieve valve
(Don't need to use to winterize)

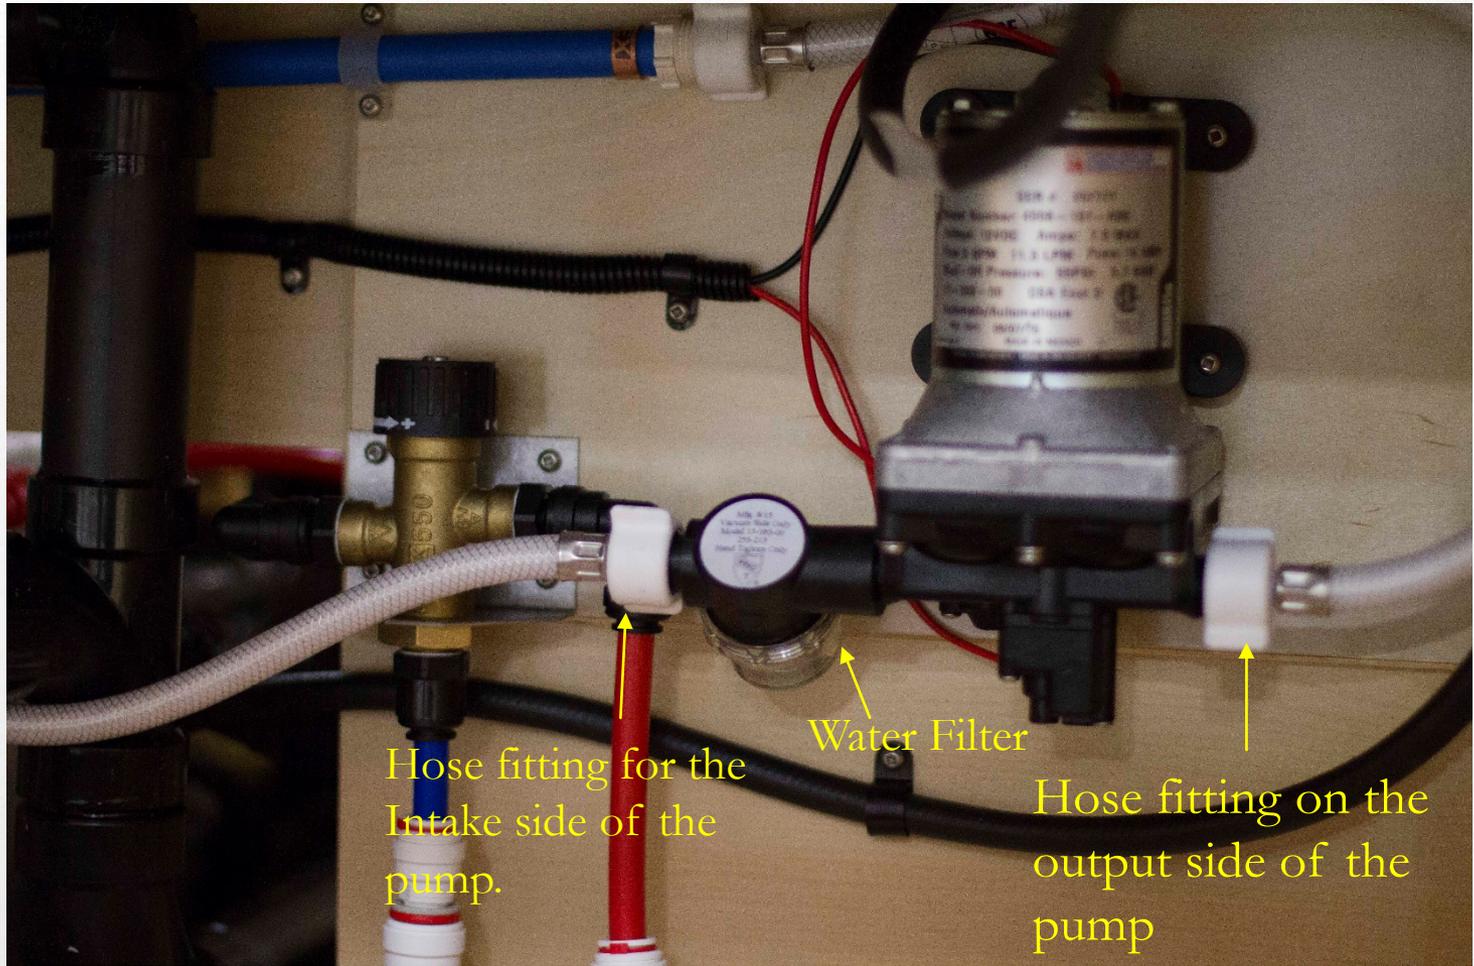

Hose fitting for the Intake side of the pump.

Water Filter

Hose fitting on the output side of the pump

Helpful Gadgets



This is a “blow out” plug that fits into your city water connection, then connects to a standard air compressor hose...
KEEP THE PRESSURE WELL BELOW 50psi!

To find this part search “Blow out plug” on Amazon.



Here is what you can use to put antifreeze into the city water line; it has a hose connection on the tubing. Camco; costs around \$25

To find this part search this “Camco Mfg 36003 RV Hand Pump Kit” on Amazon.

Steps To Winterizing Your T@B

To Winterize with air Blow Out Plug follow steps 1-2-3-4

1. Open all Drain Valves shown in Page 2, 3 and the fresh water tank drain valve shown on page 4, then look at the Pic on page 4 and disconnect both hose fittings so water can drain away from the pump. *(have a rag ready to catch the water coming out of the pump)* Now open all Faucets and Shower valves to allow water to drain from the system. After water has stopped coming out of the drain valves shown in page 2 and 3 you can attached the hose fittings back on the pump.
2. Leaving the drain valves and faucets open, attach the “Blow Out Plug” to the city water connection, attach air supply to blow out the left over water from the system. **“Pressurize Water line Slowly” “MAX 50 PSI”** Flush the Toilet a few times after the Blow out Plug is attached to get the water out of it.
3. After you are satisfied that the water is blown out of the system disconnect air supply and then close all valves and faucets.
4. Now pour some RV antifreeze down your sink and shower drains. Drain access water from Black and Grey water tanks.

To Winterize with RV Antifreeze follow steps

1. Open all Drain Valves shown in Page 2 and 3, now open all Faucets and Shower valves to allow water to drain from the system once the waters all drain out, close all the faucets and drain valves.
2. Now put the valves in winterizing mode as shown in page 2.
3. Now add 3 gal. RV antifreeze to your fresh water tank and turn on your water pump.
4. Open your faucets one at a time until you see the color of the antifreeze then go to the next one, *(don't forget to flush the toilet a few times to flush out the water)* once you get to the last one leave it open until the pump is drawing air from the fresh water tank, then close it and turn off your pump.
5. Now pour some Antifreeze down your drains and then drain your Black and Grey water tanks.

Steps To Dewinterize Your T@B

1. Mix a bleach solution, “ $\frac{1}{2}$ cup per gallon of water” Flush the system with this solution to sanitize it.
2. Then flush it with 2 full tanks of water to get rid of the sanitizing solution.